

# Niche Aluminium LED Downlight Installation Instructions




## Product Specifications

Model No.	HV5701C-BLK	HV5701N-BLK	HV5701W-BLK	HV5701C-WHT	HV5701N-WHT	HV5701W-WHT	HV5702C-BLK	HV5702N-BLK	HV5702W-BLK	HV5702C-WHT	HV5702N-WHT	HV5702W-WHT
Name	Niche Square						Niche Round					
Material	Aluminium						Aluminium					
Colour	Black			White			Black			White		
IP Rating	Fitting: IP54   LED Driver: IP20						Fitting: IP54   LED Driver: IP20					
Input Voltage	240v AC - Supplied with Remote LED Driver complete with Flex and Plug						240v AC - Supplied with Remote LED Driver complete with Flex and Plug					
Lamp Base	Built in LED						Built in LED					
Lamp Wattage	1x 3W						1x 3W					
Colour Temp	5500k	4000k	3000k	5500k	4000k	3000k	5500k	4000k	3000k	5500k	4000k	3000k
Lumens	270lm	255lm	240lm	270lm	255lm	240lm	270lm	255lm	240lm	270lm	255lm	240lm
CRI	> 80						> 80					
Wiring	Parallel						Parallel					
Dimmable	No						No					
Warranty	3 Years Replacement*						3 Years Replacement*					


## Important Safety Issues:

- This product must be installed by a qualified electrician according to AS/NZS 3000.
- Ensure all electrical mains are disconnected before any installation.
- Modification of this product will void any warranty.
- Havit Lighting does not take responsibility for wrong installation, incorrect use, or use of installation material that does not belong to the system.
- Aluminium and 304SS fittings must not be installed within 5km of any salt water environments.
- All o-rings and seals must be in place correctly to maintain warranty
- The light fitting component of this product does not have any replaceable parts, Therefore once light fitting stops working, Whole light fitting will have to be replaced.
- This fitting cannot be installed with loose fill insulation.
- This form may be updated at any time due to product improvements, please check online installation form for most current version.

### HV5701 Dimensions

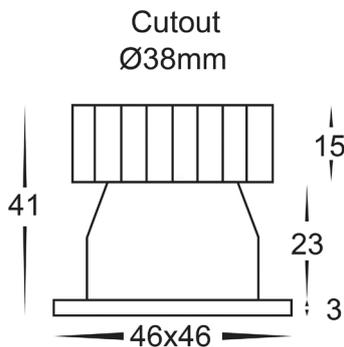


### HV5702 Dimensions

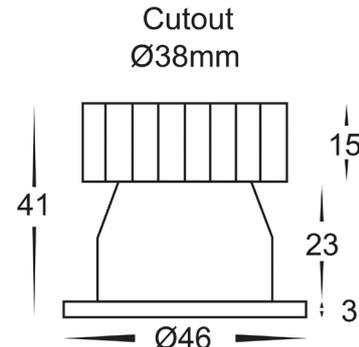

## Steps for Installation:

1. Make sure that the electrical circuit is free of voltage (master switch off)
2. Cut a hole using cut out size from Dimensions above, Make sure placement of fitting allows for minimum distance from joists and ceiling above if any See installation diagram for measurements.
3. Insert plug into hole.
4. Insert driver into hole making sure this is not placed beneath any insulation, Driver must have proper ventilation to prolong life of fitting. Failure to do this will void warranty.
5. Apply pressure on springs on downlight and insert into hole and release.
6. Using a plug base, Plug cable supplied with fitting into plug base.
7. All connections must be carried out carefully, inspect all contacts before switching back on the electric circuit

## Installation Diagram

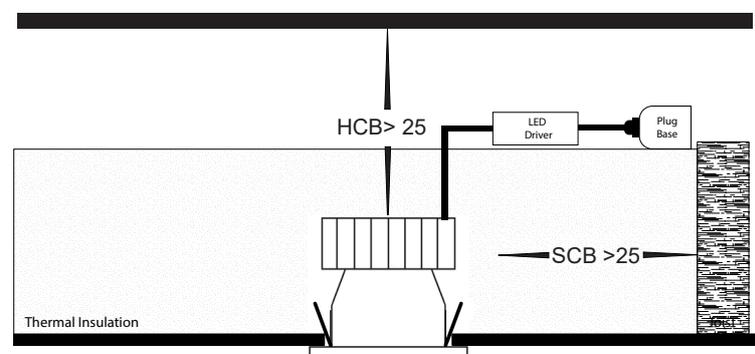

## Must be installed by a licensed electrician

### Contact Details:

143 Beauchamp Road  
Matraville NSW 2036  
Australia

Tel: 02 9381 8300  
Fax: 02 9666 8881  
Email: sales@havit.com.au  
Web: www.havit.com.au

### Warranty Terms & Conditions\*



### Additional Information

