
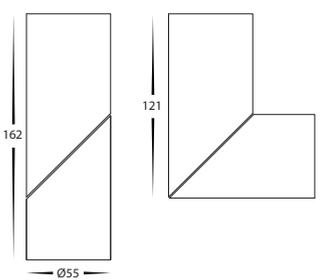
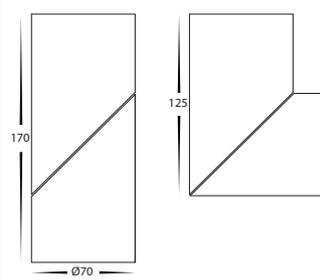
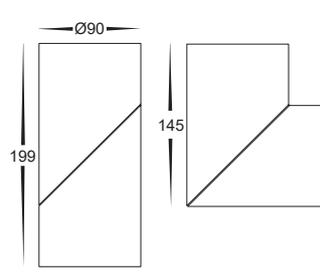
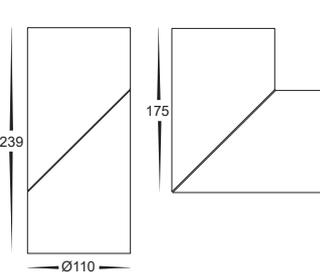
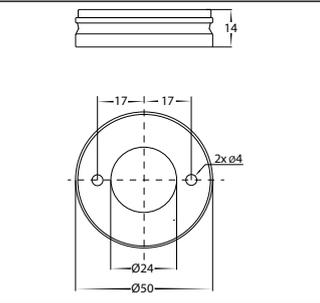
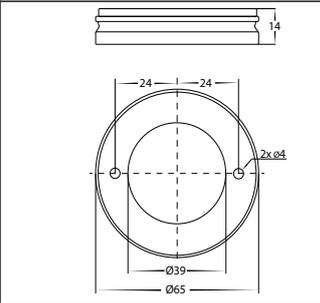
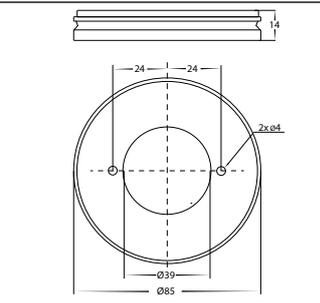


Nella Surface Mounted Downlight Installation Instructions

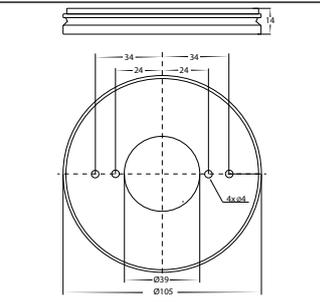

Product Specifications

Model No.	HV5822T-BLK	HV5822T-WHT	HV5823T-BLK	HV5823T-WHT	HV5824T-BLK	HV5824T-WHT	HV5825T-BLK	HV5825T-WHT
Name	Nella Rotatable							
Material	Aluminium							
Colour	Black	White	Black	White	Black	White	Black	White
IP Rating	IP54							
Input Voltage	240v							
Protection Class	1 (Requires Earth) 							
Lamp Base	Built in LED							
Lamp Wattage	1x 7w		1x 12w		1x 18w		1x 24w	
Colour Temp	TRI-Colour - 3000k, 4000k, 5500k		TRI-Colour - 3000k, 4000k, 5500k		TRI-Colour - 3000k, 4000k, 5500k		TRI-Colour - 3000k, 4000k, 5500k	
Lumens	395lm, 485lm, 465lm		790lm, 880lm, 855lm		1415lm, 1600lm, 1485lm		2100lm, 2320lm, 2270lm	
CRI	> 80							
Wiring	Parallel							
Dimmable	Yes - Triac Dimmable							
Warranty	3 Years Replacement*							

<h3>HV5822 Dimensions</h3> 	<h3>HV5823 Dimensions</h3> 	<h3>HV5824 Dimensions</h3> 	<h3>HV5825 Dimensions</h3> 
<h3>HV5822 Mounting Base Dimensions</h3> 	<h3>HV5823 Mounting Base Dimensions</h3> 	<h3>HV5824 Mounting Base Dimensions</h3> 	<h3>HV5825 Mounting Base Dimensions</h3> 

Important Safety Issues:

- This product must be installed by a qualified electrician according to AS/NZS 3000.
- Ensure all electrical mains are disconnected before any installation.
- Modification of this product will void any warranty.
- Havit Lighting does not take responsibility for wrong installation, incorrect use, or use of installation material that does not belong to the system.
- Aluminium and 304SS fittings must not be installed within 5km of any salt water environments.
- All o-rings and seals must be in place correctly to maintain warranty
- This form may be updated at any time due to product improvements, please check online installation form for most current version.

Steps for Installation:

1. Make sure that the electrical circuit is free of voltage (master switch off)
2. Remove base plate by loosening allen screws on side of fitting.
3. Unplug fitting from driver and set fitting aside
4. Install base plate in desired location using appropriate screws for application.
5. Connect the cable: Use wire with earth, connect earth first then positive and then neutral
6. Reconnect plug from fitting to base plate.
7. Fitting is preset to 3000k, To change slide switch inside fitting to desired colour temperature
8. Reattach fitting to base plate and tighten allen screws making sure these are tight.
9. Redirect head by gently moving bottom half of fitting to desired direction.
10. All connections must be carried out carefully, inspect all contacts before switching back on the electric circuit.

Must be installed by a licensed electrician

Contact Details:

143 Beauchamp Road
Matraville NSW 2036
Australia

Tel: 02 9381 8300
Fax: 02 9666 8881
Email: sales@havit.com.au
Web: www.havit.com.au

Warranty Terms & Conditions*



Additional Information

