

Pelare Pillar Light Installation Instructions




Product Specifications

Model No.	HV1699T-BLK-240V-RND	HV1699T-BLK-240V-SQ	HV1699T-BLK-24V-RND	HV1699T-BLK-24V-SQ
Name	Pelare		Pelare	
Material	Aluminium		Aluminium	
Colour	Black		Black	
IP Rating	IP65		IP65	
Installation Type	Ground - Surface Mounted		Ground - Surface Mounted	
Input Voltage	240v AC		24v DC - Constant Voltage	
Protection Class	1 (Requires Earth) ⚡		3 (no earth required) ⚡	
Lamp Base	Built in LED		Built in LED	
Lamp Wattage	1x 12w		1x 12w	
Colour Temp	TRI Colour - 3000k, 4000k, 5500k		TRI Colour - 3000k, 4000k, 5500k	
Lumens	700lm, 750lm, 730lm		700lm, 750lm, 730lm	
CRI	> 80		> 80	
Wiring	Parallel		Parallel	
Dimmable	No		No	
Warranty	3 Years Replacement*		3 Years Replacement*	


Important Safety Issues:

- This product must be installed by a qualified electrician according to AS/NZS 3000.
- Ensure all electrical mains are disconnected before any installation.
- Modification of this product will void any warranty.
- Havit Lighting does not take responsibility for wrong installation, incorrect use, or use of installation material that does not belong to the system.
- When installing low voltage fittings, Voltage to fitting must be within +or- 5% of voltage required, if not within this allowance warranty will be voided.
- Aluminium and 304SS fittings must not be installed within 5km of any salt water environments.
- All o-rings and seals must be in place correctly to maintain warranty
- When installing surface mounted bollards, base plate must be installed on concrete or concrete pad, Fitting should not be installed under ground level, all holes including cable entry must be siliconed to prevent any water penetration into fitting, silicone must also be applied around fitting at ground level. Failure to do this will void warranty
- This form may be updated at any time due to product improvements, please check online installation form for most current version.


HV1699T-RND Mounting Base

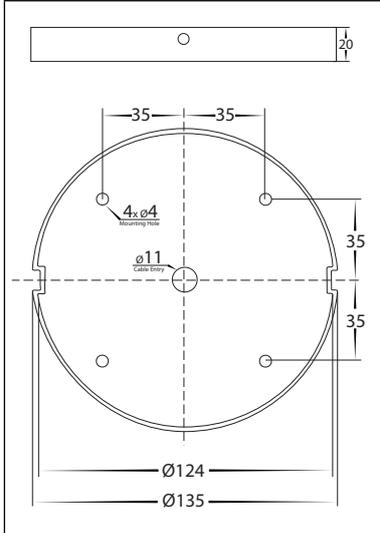


HV1699T-RND Dimensions

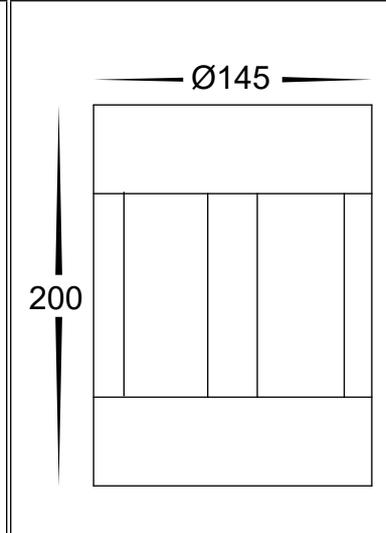

HV1699T-SQ Mounting Base

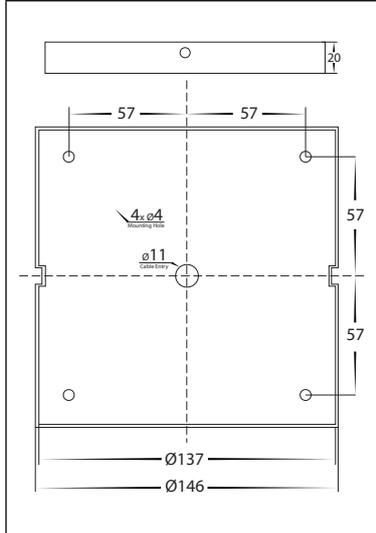

HV1699T-SQ Dimensions

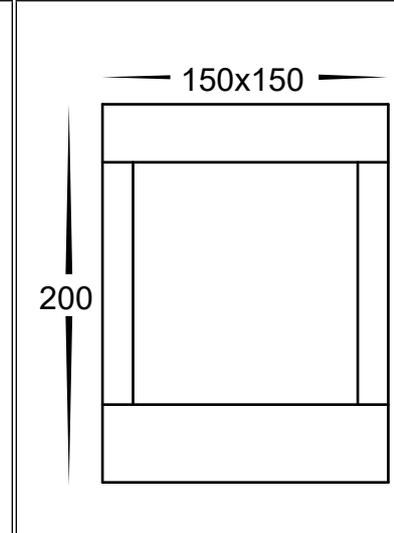

Steps for Installation: HV1629T-BLK-240V-RND

- Make sure that the electrical circuit is free of voltage (master switch off).
- Remove baseplate from fitting by removing 2x allens screws on side of fitting and set aside.
- Insert cable through cable entry hole of baseplate
- Install baseplate in desired location using appropriate screws for application. The screws supplied are mild steel which must be replaced with higher grade if there is any chance of them being affected by water. The location of baseplate must be installed on either concrete or concrete base and cannot be installed under ground level.
- Seal all holes in the base plate including cable entry and screw holes.
- Connect the cable using wire with earth. Connect earth first, then live and neutral wires.
- Colour temperature is set to 3000K. To change, remove locate switch in bottom of fitting and slide to desired colour temperature.
- Affix the fitting to the baseplate by reattaching the 2x allen screws removed earlier making sure these are tight to reduce any movement in fitting.
- All connections must be carried out carefully, inspect all contacts before switching back on the electric circuit.

Steps for Installation: HV1629T-BLK-24V-RND

- Make sure that the electrical circuit is free of voltage (master switch off).
- Remove baseplate from fitting by removing 2x allens screws on side of fitting and set aside.
- Insert cable through cable entry hole of baseplate
- Install baseplate in desired location using appropriate screws for application. The screws supplied are mild steel which must be replaced with higher grade if there is any chance of them being affected by water. The location of baseplate must be installed on either concrete or concrete base and cannot be installed under ground level.
- Seal all holes in the base plate including cable entry and screw holes.
- Use an appropriate 24v DC Constant Voltage LED Driver - DO NOT CONNECT LIGHT FITTING DIRECT TO 240V
- Connect the cable, Connect live then neutral wires.
- Colour temperature is set to 3000K. To change, remove locate switch in bottom of fitting and slide to desired colour temperature.
- Affix the fitting to the baseplate by reattaching the 2x allen screws removed earlier making sure these are tight to reduce any movement in fitting.
- All connections must be carried out carefully, inspect all contacts before switching back on the electric circuit.

Must be installed by a licensed electrician

Contact Details:

143 Beauchamp Road
Matraville NSW 2036
Australia
Tel: 02 9381 8300
Fax: 02 9666 8881
Email: sales@havit.com.au
Web: www.havit.com.au

Warranty Terms & Conditions*



www.havit.com.au

