


Taper Wall Light Installation Instructions




Product Specifications

Model No.	HV3608C-BLK	HV3608W-BLK	HV3608C-SS316	HV3608W-SS316	HV3608C-WHT	HV3608W-WHT	HV3608C-CP	HV3608W-CP
Name	Taper							
Material	316 Stainless Steel						316 Stainless Steel + Copper	
Colour	Black		Stainless Steel		White		Copper	
IP Rating	IP44							
Input Voltage	12v DC							
Protection Class	⚡ (Low Voltage)							
Lamp Base	G4							
Lamp Wattage	1x 1.5w							
Colour Temp	5500k	3000k	5500k	3000k	5500k	3000k	5500k	3000k
Lumens	110lm	90lm	110lm	90lm	110lm	90lm	110lm	90lm
CRI	>80+							
Wiring	Parallel							
Dimmable	No							
Warranty	3 Years Replacement*							

Dimensions

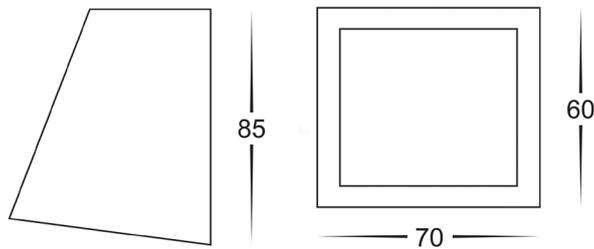

Mounting Base

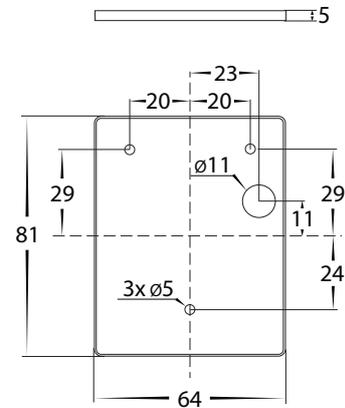

Important Safety Issues:

- This product must be installed by a qualified electrician according to AS/NZS 3000.
- Ensure all electrical mains are disconnected before any installation.
- Modification of this product will void any warranty.
- Must not exceed maximum wattage - G4 20w
- Havit Lighting does not take responsibility for wrong installation, incorrect use, or use of installation material that does not belong to the system.
- When installing low voltage fittings, Voltage to fitting must be within +or- 5% of voltage required and cannot be installed more than 25m from LED Driver, if not within this allowance warranty will be voided.
- When installing copper fittings, gloves must be worn to avoid any oils transferring to fitting.
- All 316 & 304 stainless steel fittings must have regular cleaning maintenance to avoid any tea staining from forming on fitting. (Warranty does not cover Tea Staining)
- All o-rings and seals must be in place correctly to maintain warranty
- This form may be updated at any time due to product improvements, please check online installation form for most current version.

Steps for Installation:

1. Make sure that the electrical circuit is free of voltage (master switch off)
2. Remove the screws from side of fitting and remove cover and set aside
3. Install base plate to wall in desired location
4. Seal all holes including cable entry and mounting holes
5. Using an appropriate 12v DC LED Driver - DO NOT CONNECT LIGHT FITTING DIRECTLY TO 240V
6. Connect the cable , Coonect live first the neutral cable. - If more than one fitting installed, wiring must be done in parallel.
7. Insert the appropriate globe by pushing globe gently into the lamp holder.
8. Reattach cover to base plate making sure screws are tight to avoid water penetration
9. Apply silicon around edge of fitting to prevent any water from getting inside to electrical connections.
10. All connections must be carried out carefully, inspect all contacts before switching back on the electric circuit.

Steps for Changing Globe:

1. Remove cover from fitting by removing the 2 screws and removing cover
2. Remove globe by gently pulling on side of globe.
3. Re-insert the appropriate globe by pushing globe gently into the lamp holder (Make sure not to exceed max wattage, see product label for correct info)
4. Reattach cover to base plate making sure screws are tight to avoid water penetration
5. Apply silicon around edge of fitting to prevent any water from getting inside to electrical connections.

Must be installed by a licensed electrician

Contact Details:

143 Beauchamp Road
Matraville NSW 2036
Australia
Tel: 02 9381 8300
Fax: 02 9666 8881
Email: sales@havit.com.au
Web: www.havit.com.au

Warranty Terms & Conditions*



Additional Information

