

# Quadru Wall Light Installation Instructions




## Product Specifications

Model No.	HV3623T-BLK	HV3623T-WHT	HV3624T-BLK	HV3624T-WHT
Name	Quadru			
Material	Aluminium			
Colour	Black	White	Black	White
Installation Type	Wall - Surface Mounted			
IP Rating	IP54			
Protection Class	1 (240v Requires Earth) ⚡			
Input Voltage	240v AC			
Lamp Base	GU10			
Lamp Wattage	1x 5w		2x 5w	
Colour Temp	TRI Colour - 3000k, 4000k, 5500k		TRI Colour - 3000k, 4000k, 5500k	
Lumens	270lm, 285lm, 300lm		2x 270lm, 2x 285lm, 2x 300lm	
CRI	> 80			
Dimmable	No - Not with Supplied Globes			
Warranty	3 Years Replacement*			


## Important Safety Issues:

- This product must be installed by a qualified electrician according to AS/NZS 3000.
- Ensure all electrical mains are disconnected before any installation.
- Modification of this product will void any warranty.
- Havit Lighting does not take responsibility for wrong installation, incorrect use, or use of installation material that does not belong to the system.
- Aluminium and 304SS fittings must not be installed within 5km of any salt water environments.
- All o-rings and seals must be in place correctly to maintain warranty
- This form may be updated at any time due to product improvements, please check online installation form for most current version.


### HV3623 Dimensions

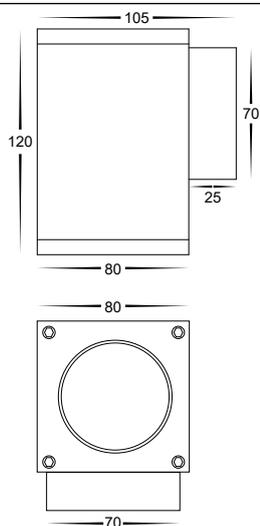

### HV3624 Dimensions

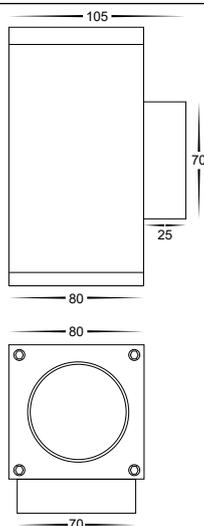

### Mounting Base Dimensions

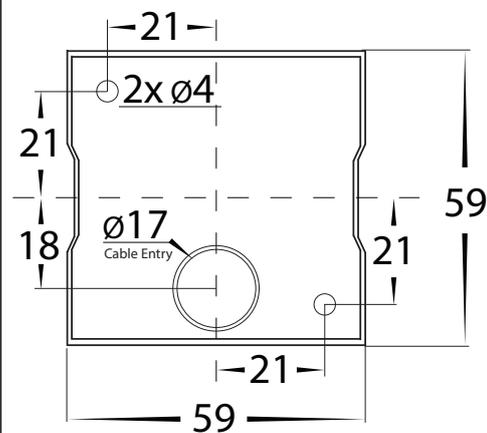

### Steps for Installation:

1. Make sure that the electrical circuit is free of voltage (master switch off)
2. Loosen allen screws from side of fitting
3. Remove mounting base plate from fitting and disconnect earth cable
4. Install base plate to wall in desired location using appropriate screws for application.
5. Seal all holes including cable entry and around screws
6. Connect the cable - use wire with earth; connect the earth first, then live and neutral wire.
7. Reconnect earth cable to mounting base.
8. Reattach fitting to baseplate making sure screws are tight to avoid water penetration.
9. Fitting is preset to 3000k, to change remove allen screws from bottom of HV3623 and top and Bottom on HV3624 and remove cap and set aside
10. Remove globe or globes by holding edge and twisting anti clockwise and pull gently to remove.
11. Slide switch on side to desired colour temperature and reinsert globe by aligning pins and twist clockwise until locked in place.
12. Reattach cap and insert allen screws and tighten making these are tight and seals are still in place to avoid water ingress.
13. Apply silicon around edge of fitting to prevent any water from getting inside to electrical connections.
14. All connections must be carried out carefully, inspect all contacts before switching back on the electric circuit.

### Steps for Changing Globe:

1. Remove allen screws from bottom of HV3623 and top and Bottom on HV3624 and remove cap and set aside
2. Remove globe or globes by holding edge and twisting anti clockwise and pull gently to remove.
3. Insert new globe by twisting clock wise making sure to check correct globe is used - Refer product label for correct wattage
4. Reattach cap and insert allen screws and tighten making these are tight and seals are still in place to avoid water ingress.

**Must be installed by a licensed electrician**

### Contact Details:

143 Beauchamp Road  
Matraville NSW 2036  
Australia

Tel: 02 9381 8300  
Fax: 02 9666 8881  
Email: sales@havit.com.au  
Web: www.havit.com.au

### Warranty Terms & Conditions\*



[www.havit.com.au](http://www.havit.com.au)

