


Aries Wall Light Installation Instructions



Product Specifications						
Model No.	HV3625S-ALUBLK	HV3625S-ALUWHT	HV3625S-BR	HV3626S-ALUBLK	HV3626S-ALUWHT	HV3626S-BR
Name	Aries					
Material	Aluminium		Solid Brass	Aluminium		Solid Brass
Colour	Black	White	Polished	Black	White	Polished
Installation Type	Wall - Surface Mounted					
IP Rating	IP65					
Protection Class	1 (240v Requires Earth)					
Input Voltage	240v AC					
Lamp Base	Built in LED					
Lamp Wattage	1x 6w			2x 6w		
Colour Temp	5 Colour - 2700k, 3000k, 4000k, 5000k, 5700k			5 Colour - 2700k, 3000k, 4000k, 5000k, 5700k		
Lumens	615lm, 630lm, 700lm, 750lm, 790lm			2x 400lm, 2x 390lm, 2x 425lm, 2x 450lm, 2x 465lm		
CRI	> 80					
Wiring	Parallel					
Dimmable	Yes, Triac Dimmable					
Warranty	3 Years Replacement*					

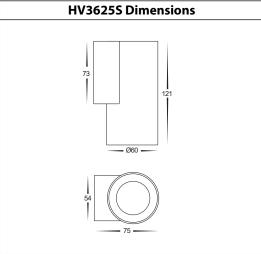

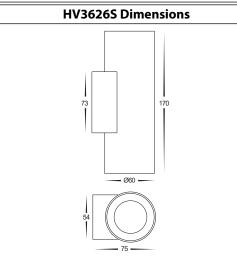

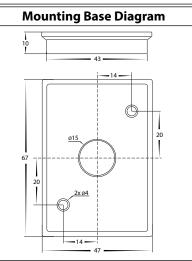

Important Safety Issues:

- This product must be installed by a qualified electrician according to AS/NZS 3000.
- Ensure all electrical mains are disconnected before any installation.
- Modification of this product will void any warranty.
- Havit Lighting does not take responsibility for wrong installation, incorrect use, or use of installation material that does not belong to the system.
- All 316 & 304 stainless steel fittings must have regular cleaning maintenance to avoid any tea staining from forming on fitting. (Warranty does not cover Tea Staining)
- All o-rings and seals must be in place correctly to maintain warranty
- This form may be updated at any time due to product improvements, please check online installation form for most current version.

Steps for Installation:

- Make sure that the electrical circuit is free of voltage (master switch off)
- Loosen the allen screws from side of fitting.
- Remove base plate from fitting.
- Install base plate to wall in desired location using appropriate screws for application.
- 5. Connect the cable - use wire with earth; connect the earth first, then live and neutral wire.
- Fitting is preset to 3000k, to change slide switch located inside base of fitting to desired colour temperature.
- 7. Reattach fitting to base plate making sure screws are tight to avoid any water penetration.
 - Apply silicon around edge of fitting to prevent any water from getting inside to electrical connections.
- All connections must be carried out carefully, inspect all contacts before switching back on the electric circuit.

Must be installed by a licensed electrician

Contact Details: 143 Beauchamp Road Tel: 02 9381 8300 Matraville NSW 2036 Fax: 02 9666 8881 Australia Email: sales@havit.com.au Web: www.havit.com.au





Warranty Terms & Conditions*