


Veldi Wall Light Installation Instructions



Product Specifications

| | | | |
|------------------|----------------------------------|-------------|-----------------|
| Model No. | HV3633T-BLK | HV3633T-WHT | HV3633T-SS316 |
| Name | Veldi | | |
| Material | 316 Stainless Steel | | |
| Colour | Black | White | Stainless Steel |
| IP Rating | IP54 | | |
| Protection Class | 1 (240v Requires Earth) ⚡ | | |
| Input Voltage | 240v AC | | |
| Lamp Base | GU10 | | |
| Lamp Wattage | 2x 5w | | |
| Colour Temp | TRI Colour - 3000k, 4000k, 5500k | | |
| Lumens | 2x 250lm, 2x 275lm, 2x 300lm | | |
| CRI | > 80 | | |
| Wiring | Parallel | | |
| Dimmable | No | | |
| Warranty | 3 Years Replacement* | | |


Dimensions

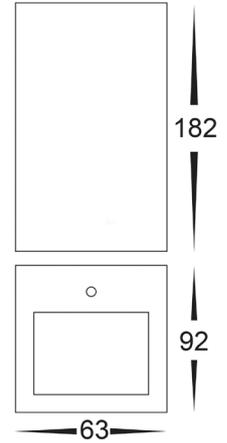

Important Safety Issues:

- This product must be installed by a qualified electrician according to AS/NZS 3000.
- Ensure all electrical mains are disconnected before any installation.
- Modification of this product will void any warranty.
- Havit Lighting does not take responsibility for wrong installation, incorrect use, or use of installation material that does not belong to the system.
- All 316 & 304 stainless steel fittings must have regular cleaning maintenance to avoid any tea staining from forming on fitting. (Warranty does not cover Tea Staining)
- All o-rings and seals must be in place correctly to maintain warranty
- This form may be updated at any time due to product improvements, please check online installation form for most current version.

Mounting Base Diagram

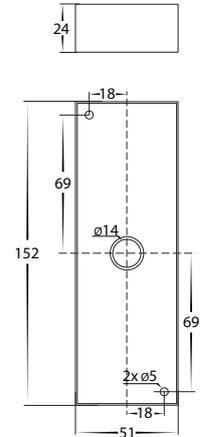

Steps for Installation:

1. Make sure that the electrical circuit is free of voltage (master switch off)
2. Remove screws from top and bottom of fitting and set aside.
3. Remove base plate from fitting.
4. Install base plate to wall in desired location using appropriate screws for application.
5. Seal all holes including cable entry and around screws
6. Connect the cable - use wire with earth; connect the earth first, then live and neutral wire.
7. Fitting is preset to 3000k, to change remove globes and slide switched on side to desired colour temperature
8. Reattach fitting to baseplate making sure screws are tight to avoid water penetration.
9. Apply silicon around edge of fitting to prevent any water from getting inside to electrical connections.
10. All connections must be carried out carefully, inspect all contacts before switching back on the electric circuit.

Steps for Changing Globe:

1. Remove cover from fitting by removing screws from top and bottom of fitting.
2. Remove globe by twisting anti clockwise
3. Insert new globe by twisting clock wise making sure to check correct globe is used - Refer product label for correct wattage
4. Reattach fitting to base plate making sure screws are tight to avoid water penetration

Must be installed by a licensed electrician

Contact Details:

143 Beauchamp Road
Matraville NSW 2036
Australia

Tel: 02 9381 8300
Fax: 02 9666 8881
Email: sales@havit.com.au
Web: www.havit.com.au

Warranty Terms & Conditions*



Additional Information

