


Concept Wall Light Installation Instructions




Product Specifications

| | | | | | | |
|---------------|-------------------------------|---------|---------------------|-------------|---------------------|-------------|
| Model No. | HV8027W | HV8027C | HV8028W-BLK | HV8028C-BLK | HV8028W-WHT | HV8028C-WHT |
| Name | Concept | | | | | |
| Material | Plaster | | Aluminium | | | |
| Colour | White (Can be painted) | | Black + Gold Insert | | White + Gold Insert | |
| IP Rating | IP20 | | | | | |
| Input Voltage | 240v AC | | | | | |
| Lamp Base | G9 - 25w Max | | | | | |
| Lamp Wattage | 1x 2w | | | | | |
| Colour Temp | 3000k | 5500k | 3000k | 5500k | 3000k | 5500k |
| Lumens | 120lm | 130lm | 120lm | 130lm | 120lm | 130lm |
| CRI | > 80 | | | | | |
| Dimmable | No - Not with globes supplied | | | | | |
| Warranty | 3 Years Replacement* | | | | | |

Dimensions

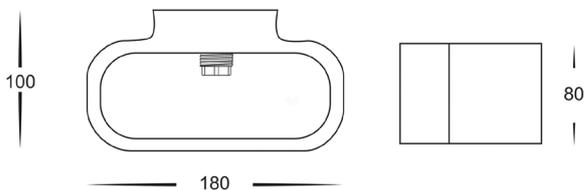

Mounting Bracket Dimensions

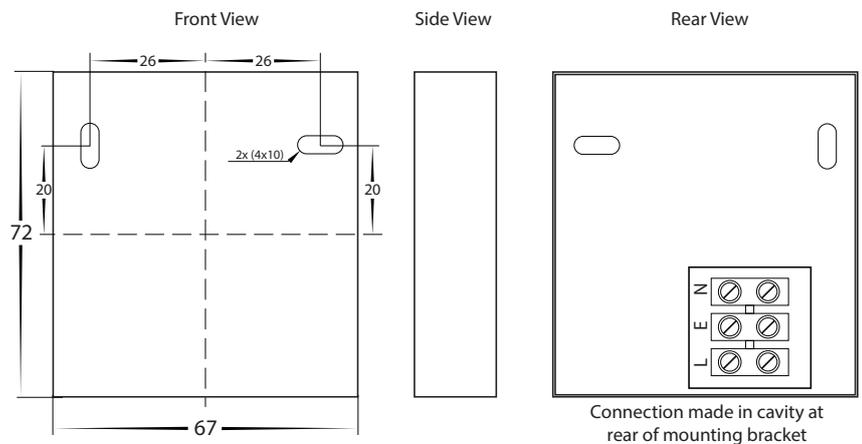

Important Safety Issues:

- This product must be installed by a qualified electrician according to AS/NZS 3000.
- Ensure all electrical mains are disconnected before any installation.
- Modification of this product will void any warranty.
- Havit Lighting does not take responsibility for wrong installation, incorrect use, or use of installation material that does not belong to the system.
- Aluminium and 304SS fittings must not be installed within 5km of any salt water environments.
- All o-rings and seals must be in place correctly to maintain warranty
- This form may be updated at any time due to product improvements, please check online installation form for most current version.

Steps for Installation:

1. Make sure that the electrical circuit is free of voltage (master switch off)
2. Remove Mounting Bracket from fitting by removing screws from top and bottom of fitting
3. Install mounting bracket in desired location using appropriate screws for application.
4. Connect the cable - use wire with earth; connect the earth first, then live and neutral wire.
5. Slide fitting back over bracket and tighten screws, Be careful not to overtighten as this may cause plaster to crack.
6. Insert globe into fitting
 - Align pins of globe into lampholder and gently push globe into place.
7. All connections must be carried out carefully, inspect all contacts before switching back on the electric circuit.

Steps for Changing Globe:

1. When Changing globes make sure not to exceed maximum wattage - Check product label for correct wattage.
 - Grab side of globe and gently pull until globe is dislodge from lampholder
 - Align pins of globe into lampholder and gently push globe into place.

Must be installed by a licensed electrician

Contact Details:

143 Beauchamp Road
Matraville NSW 2036
Australia

Tel: 02 9381 8300
Fax: 02 9666 8881
Email: sales@havit.com.au
Web: www.havit.com.au

Warranty Terms & Conditions*



Additional Information

