




RF Single Colour Wall Mounted Controller

09.280AU.04181



Important: Read All Instructions Prior to Installation

Function introduction

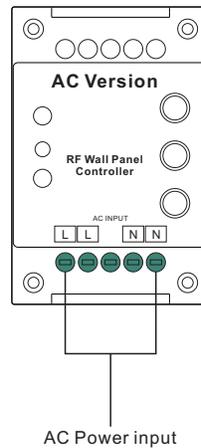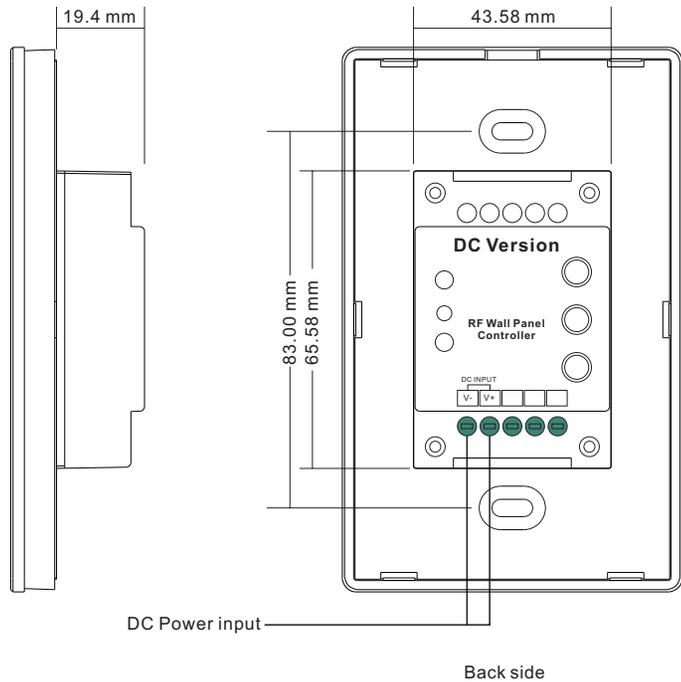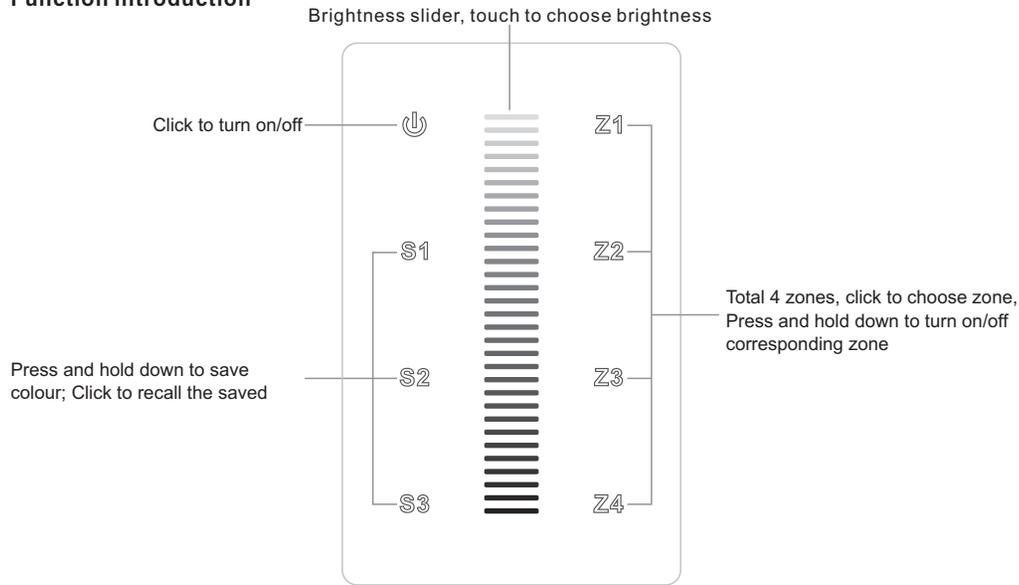

Product Data

	DC Version	AC Version
Output Signal	RF signal	RF signal
Power Supply	12-24VDC	100-240VAC
Power consumption	20 mA	20 mA
Operating temperature	0-40°C	0-40°C
Relative humidity	8% to 80%	8% to 80%
Dimensions	75x120x29.1mm	75x120x29.1mm


- Touch sensitive
- Glass interface(white & black)
- Compatible with all universal series RF receivers, radio frequency: 916.5MHz
- Control single colour
- Control 4 zones synchronously and separately

• Waterproof grade: IP20

Safety & Warnings


- DO NOT install with power applied to device.
- DO NOT expose the device to moisture.

Wiring diagram

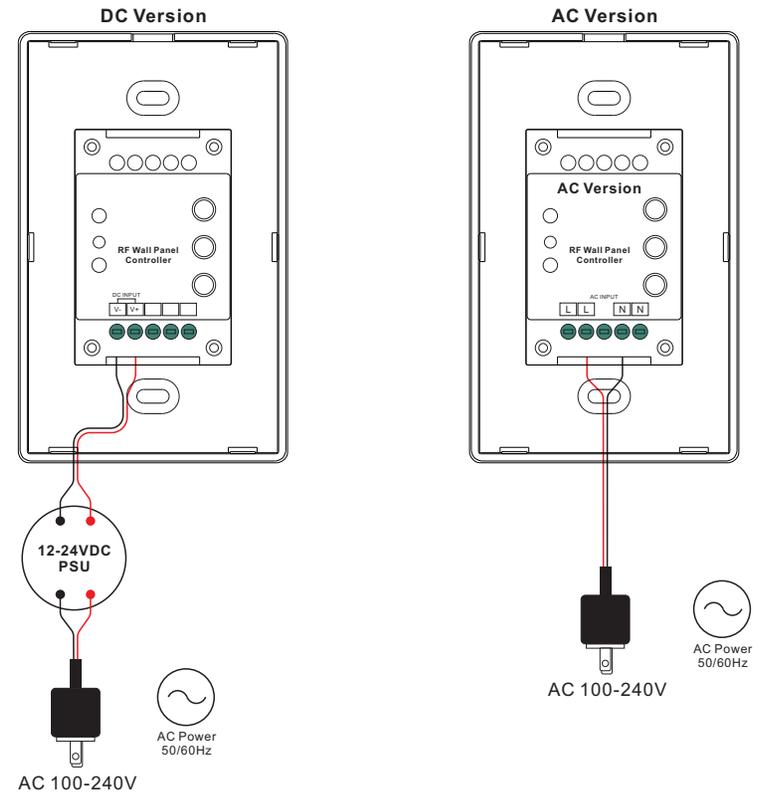

Operation

1. Do wiring the wall panel & RF receiver according to wiring diagram (please refer to the instruction of RF receiver that you would like to pair with)
2. Power on, then touch the button  , indicator of the controller turned blue

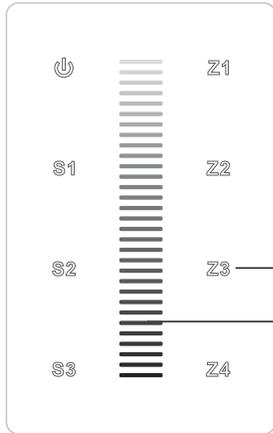


Pair with RF receiver



Step 1:Click the "Learning Key" button on RF receiver or re-power on the receiver three times continuously to set it into pairing status

Step 2:Choose and click a zone number(e.g. zone 3)

Step 3:Touch the brightness slider, LED lights connected with the RF receiver flicker once means the receiver is paired with zone 4 successfully.

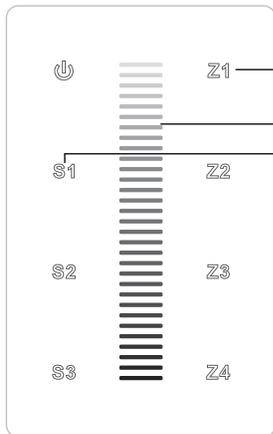


Save colour/scene/mode

Step 1:Choose and click one or multiple paired zone numbers(e.g. zone 1)

Step 2:Touch the brightness slider to select the scene you like

Step 3:Press and hold any scene buttons of **S1-S3**(e.g. **S1**) , LED lights connected with the RF receiver flicker once means the colour/scene was saved successfully.

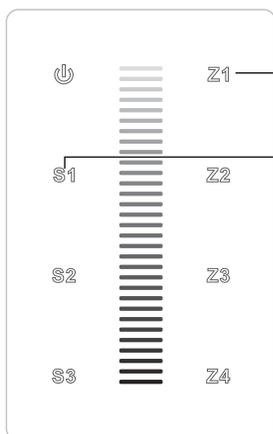

Recall the saved colors/scenes

Step 1:Choose and click one or multiple paired zone numbers(e.g. zone 1)

Step 2:Click any scene buttons of **S1-S3**(e.g. **S1**) to recall the saved scene

Installation

