

# RGB+Dual Color RF Wireless LED Dimmer



**Important:** Read All Instructions Prior to Installation

HV9102-2858Z4-5C

## Product Data


Output	RF signal
Operation Frequency	869.5/916.5/434MHz
Power Supply	4.5V(3xAAA battery)
Operating temperature	0-40°C
Relative humidity	8% to 80%
Dimensions	153x52x19mm

- Control 4 zones of RF receiver
- RGB+CCT color controller
- Compatible with universal serie RF receiver
- 1 receiver can be paired by max 8 different remote controls.
- Waterproof grade: IP20

## Safety & Warnings

- This device contains AAA batteries that shall be stored and disposed properly.
- DO NOT expose the device to moisture.

## Pair with RF receiver(Method 1)

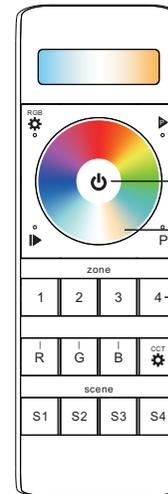

**Step 1:** Do wiring the RF receiver according to wiring diagram (please refer to the instruction of RF receiver that you would like to pair with).

**Step 3:** Power off and power on the receiver

**Step 2:** Click **ON/OFF** button to activate the remote

**Step 5:** Touch the color wheel, LED lights connected with the RF receiver flicker once means the receiver is paired with zone 4 successfully.

**Step 4:** Choose and click a zone number (e.g. zone 4)

## Pair with RF receiver(Method 2)



**Step 1:** Do wiring the RF receiver according to wiring diagram (please refer to the instruction of RF receiver that you would like to pair with).

**Step 2:** Click **ON/OFF** button to activate the remote

**Step 3:** Power off and power on the receiver

**Step 4:** Choose and click a zone number (e.g. zone 4) twice, then press and hold it continuously and quickly within 10 seconds, LED lights connected with the RF receiver flicker once means the receiver is paired with zone 4 successfully.

Touch the slider to switch on the dual color LED lighting, and choose the color temperature.

Press and hold down to increase/decrease light intensity of RGB channels

Click to turn on/off all zones

Touch color to get any color

Play/Pause button, click to play/pause 10 built-in modes. Press and hold down to speed up/down the running program

4 zones:

click to select corresponding zone, press and hold down to turn ON/OFF corresponding zone

**R, G, B channels**, click to turn ON/OFF corresponding channel, press and hold down to increase/decrease light intensity of the channel


Press and hold down to save color/scene/mode, click to recall the saved

Click to recall the program by 4 different running modes: jump, flash, fade, strobe

Program setting button: click the button, LED lighting connected with receiver will flash once, then touch the color wheel to choose 2-5 kinds of colors (max 5 colors), then click P button again, LED lighting connected on receiver will flash once again, which means program finished. Press button ▶ to run the program.

Press and hold down to increase/decrease light intensity of CCT dual color


Front side

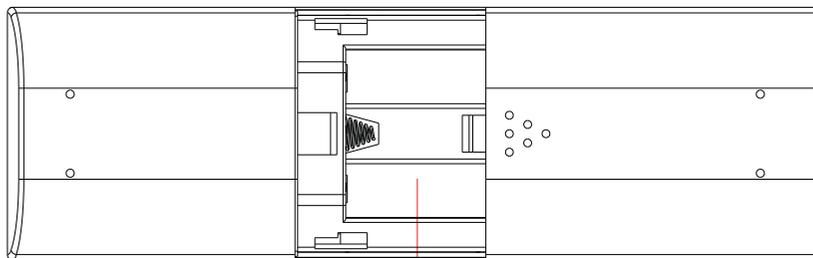

4.5V(3xAAA battery)

Back side

## Program the running mode

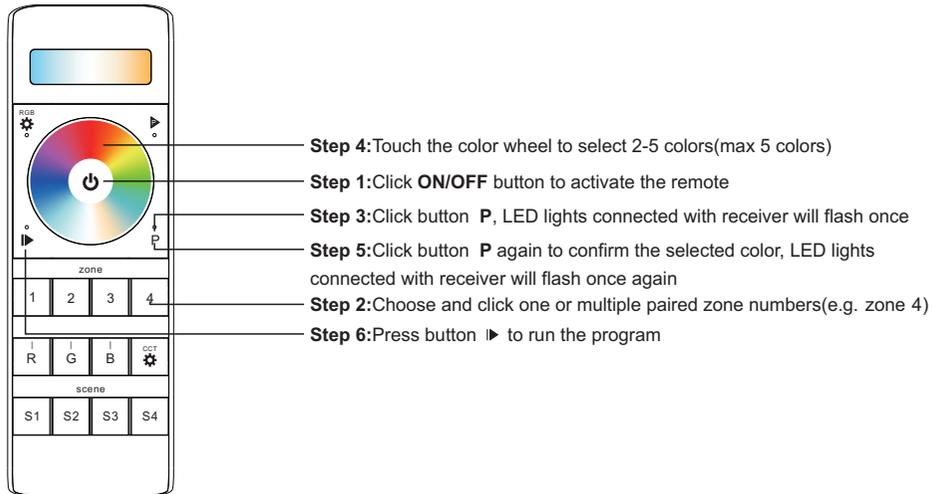

### If you use multiple receivers, you have two choices:

Option 1: have all the receivers in the same zone, like zone 1



Option 2: have each receiver in a different zone, like zone 1, 2, 3 or 4



### How to stop running mode of single color LED light caused by RGBW sender interference:

1. When pairing single color LED light to a single color remote, it might be interfered and paired by nearby RGBW senders, which might control the single color light into running mode. The running mode can not be stopped by the paired single color remote or by delete pairing.
2. Then we need this remote, and pair the remote to the receiver via above "Pair with RF receiver(Method 2)", then touch the color wheel to stop the running mode.
3. Then delete pairing and pair the receiver to the single color remote again, it can be controlled by the remote again.