
Revo Spot Light Installation Instructions



Ha√it

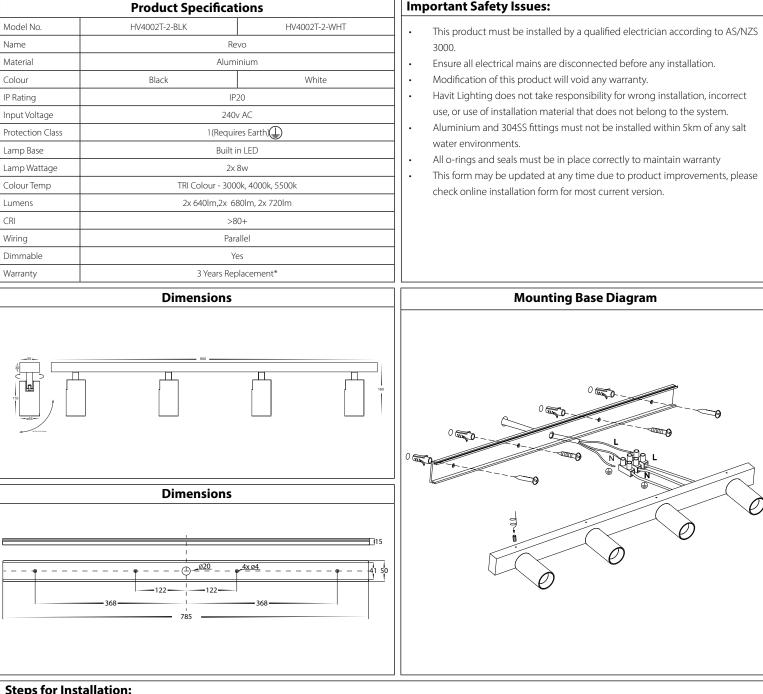

Steps for Installation:

- Make sure that the electrical circuit is free of voltage (master switch off) 1.
- 2. Remove allen screws on side of fitting and set aside.
- 3. Install base plate in desired location
- 4. Connect the cable - use wire with earth; connect the earth first, then live and neutral wire
- 5. Fitting is preset to 3000k, to change slide switch to desired colour temperature
- 6. Reattach fiiting to base plate making sure allen screws are tight.
- 7. Adjust fitting to desired position making sure to stop rotating when fitting cannot rotate anymore, If forced fitting will continue to rotate and cause internal cables to become entangled causing fitting to short. If this is done, warranty will be voided.
- 8. All connections must be carried out carefully, inspect all contacts before switching back on the electric circuit.

Contact Details:	W	arranty Terms & Conditions*	Additional Information

Must be installed by a licensed electrician